


# Working range

Main boom - metric 75%

## Main boom

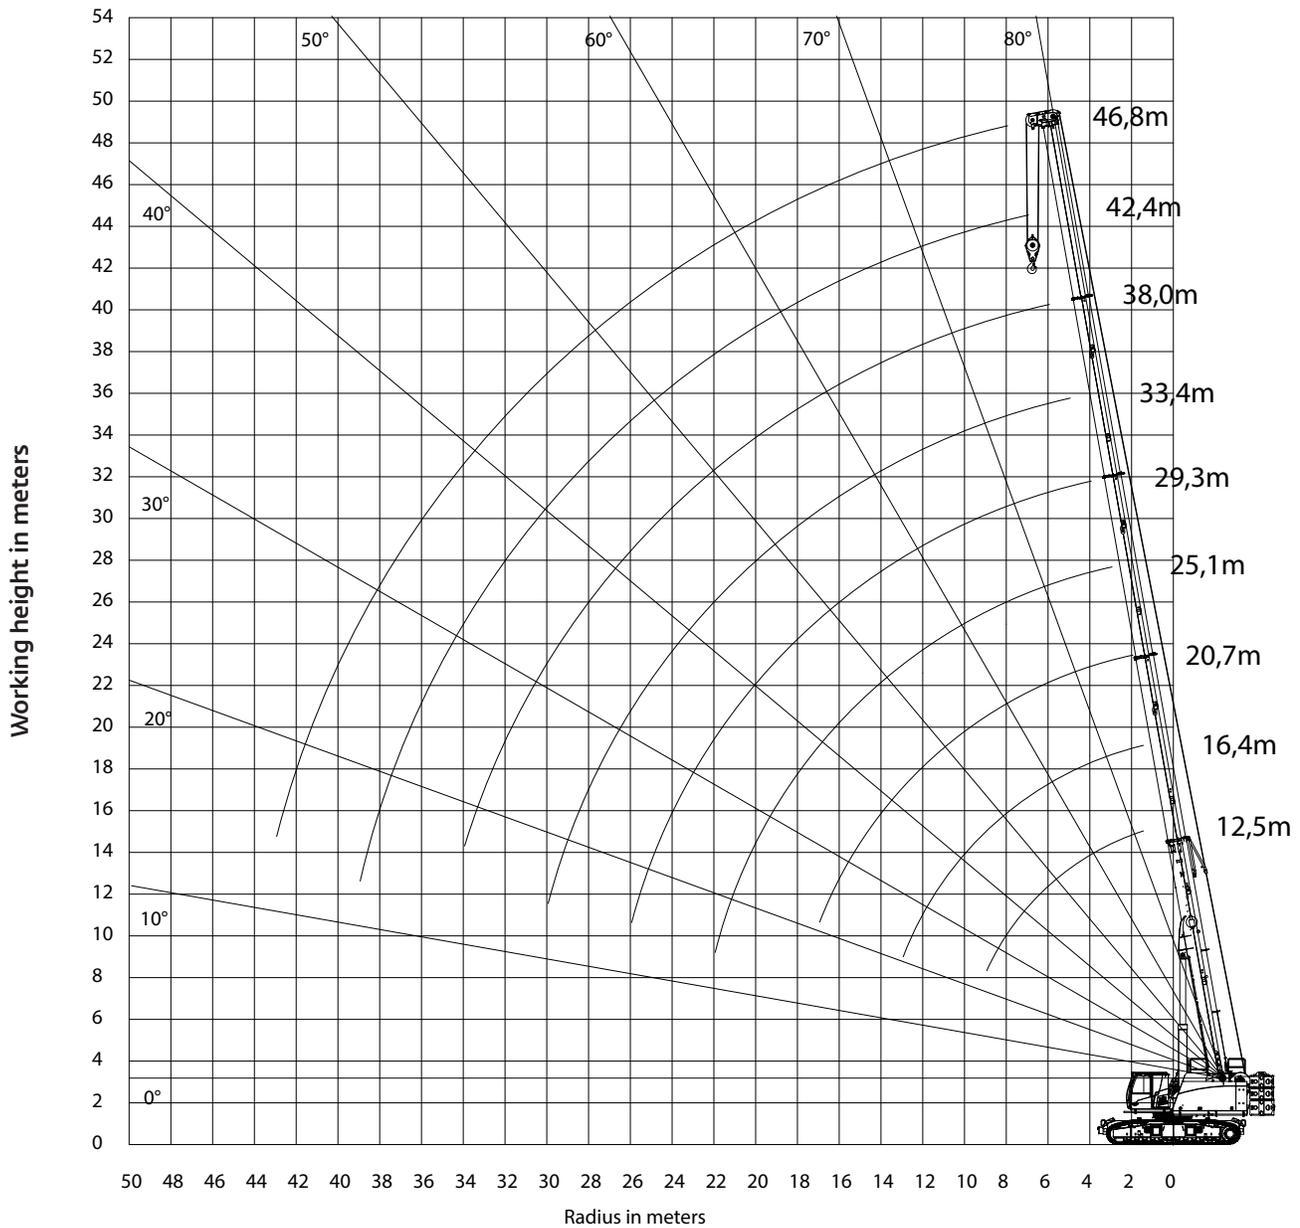

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Main boom - metric 75%



46,8 m



28,2 t



100%



360°



0.6°



Kilograms

Radius [m]	Main boom length [m]								
	12.5	16.5	20.8	25.1	29.3	33.5	38.0	42.4	46.8
2.5	100.0	65.0	41.5						
3.0	97.0	65.0	60.0	54.0					
4.0	85.0	65.0	58.0	50.0	40.5				
5.0	75.0	63.0	54.6	46.5	38.0	30.4			
6.0	65.0	58.9	50.2	43.5	35.7	28.7	23.0		
7.0	51.5	52.6	46.5	40.5	33.7	27.0	21.5	15.5	
8.0	41.5	42.8	42.9	38.0	31.8	25.5	20.1	15.5	12.0
9.0	35.0	35.9	36.0	34.7	30.1	24.5	18.9	15.2	12.0
10.0		31.3	31.6	30.2	28.0	23.3	17.9	14.8	12.0
12.0		24.1	24.3	23.8	22.5	20.7	16.0	13.4	11.8
14.0		18.6	19.7	19.4	18.4	17.0	14.4	12.0	11.2
16.0			16.0	16.0	15.4	14.0	12.5	10.9	10.6
18.0			12.8	13.4	13.2	11.9	10.7	9.9	9.7
20.0				11.8	11.4	10.2	9.3	9.0	9.0
22.0				10.7	9.8	9.4	8.4	8.0	8.3
24.0					9.0	8.7	7.6	7.0	7.7
26.0					7.9	8.0	7.0	6.2	7.1
28.0						7.1	6.4	5.6	6.5
30.0						6.3	5.9	5.1	5.7
32.0							5.5	4.6	5.0
34.0							5.0	4.3	4.4
36.0								4.0	3.8
38.0								3.7	3.3
40.0									2.9
42.0									2.4

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Main boom - metric 75%



46,8 m



28,2 t



100%



360°



1.5°



Kilograms

Radius [m]	Main boom length [m]								
	12.5	16.5	20.8	25.1	29.3	33.5	38.0	42.4	46.8
2.5	80.0	47.0	39.0						
3.0	75.0	48.3	44.3	39.0					
4.0	65.0	47.0	42.2	36.8	28.9				
5.0	59.0	46.7	39.5	34.5	27.6	22.7			
6.0	55.0	46.0	37.0	32.8	26.4	21.8	17.3		
7.0	50.4	43.2	34.8	31.1	25.2	20.9	16.8	11.7	
8.0	41.0	40.2	32.8	29.5	23.8	20.2	16.2	11.7	8.6
9.0	34.1	35.3	31.0	28.1	22.8	19.4	15.7	11.7	8.6
10.0		30.5	29.1	26.8	21.8	18.7	15.2	11.5	8.6
12.0		23.4	23.2	22.3	20.1	16.4	14.3	10.9	8.6
14.0		17.5	19.1	18.5	17.3	14.7	13.0	10.4	8.5
16.0			15.7	15.1	14.5	12.2	10.9	10.0	8.1
18.0			12.5	13.2	12.4	10.5	9.6	9.0	7.8
20.0				11.3	10.8	9.3	8.4	8.0	7.4
22.0				10.2	9.6	8.4	7.4	6.9	7.1
24.0					8.7	7.7	6.7	6.1	6.7
26.0					7.6	7.1	6.1	5.5	6.3
28.0						6.8	5.7	5.0	6.0
30.0						6.1	5.4	4.5	5.6
32.0							5.0	4.2	4.9
34.0							4.6	3.9	4.2
36.0								3.7	3.7
38.0								3.5	3.2
40.0									2.7
42.0									2.3

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# Load chart

Auxiliary boom nose - metric 75%



46,8 m



with auxiliary boom nose



28,2 t



100%



360°



1.5°



Kilograms


Radius [m]	Main boom length [m]								
	12.5	16.5	20.8	25.1	29.3	33.5	38.0	42.4	46.8
2.5	9.0	9.0	9.0						
3.0	9.0	9.0	9.0	9.0					
4.0	9.0	9.0	9.0	9.0	9.0				
5.0	9.0	9.0	9.0	9.0	9.0	9.0			
6.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0		
7.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	
8.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.6
9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.6
10.0		9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.6
12.0		9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.6
14.0		9.0	9.0	9.0	9.0	9.0	9.0	9.0	8.5
16.0			9.0	9.0	9.0	9.0	9.0	9.0	8.1
18.0			9.0	9.0	9.0	9.0	9.0	9.0	7.8
20.0				9.0	9.0	9.0	8.4	8.0	7.4
22.0				9.0	9.0	8.4	7.4	6.9	7.1
24.0					8.7	7.7	6.7	6.1	6.7
26.0					7.6	7.1	6.1	5.5	6.3
28.0						6.8	5.7	5.0	6.0
30.0						6.1	5.4	4.5	5.6
32.0							5.0	4.2	4.9
34.0							4.6	3.9	4.2
36.0								3.7	3.7
38.0								3.5	3.2
40.0									2.7
42.0									2.3

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Working range

Extensions - metric 75%

## Main boom with extensions

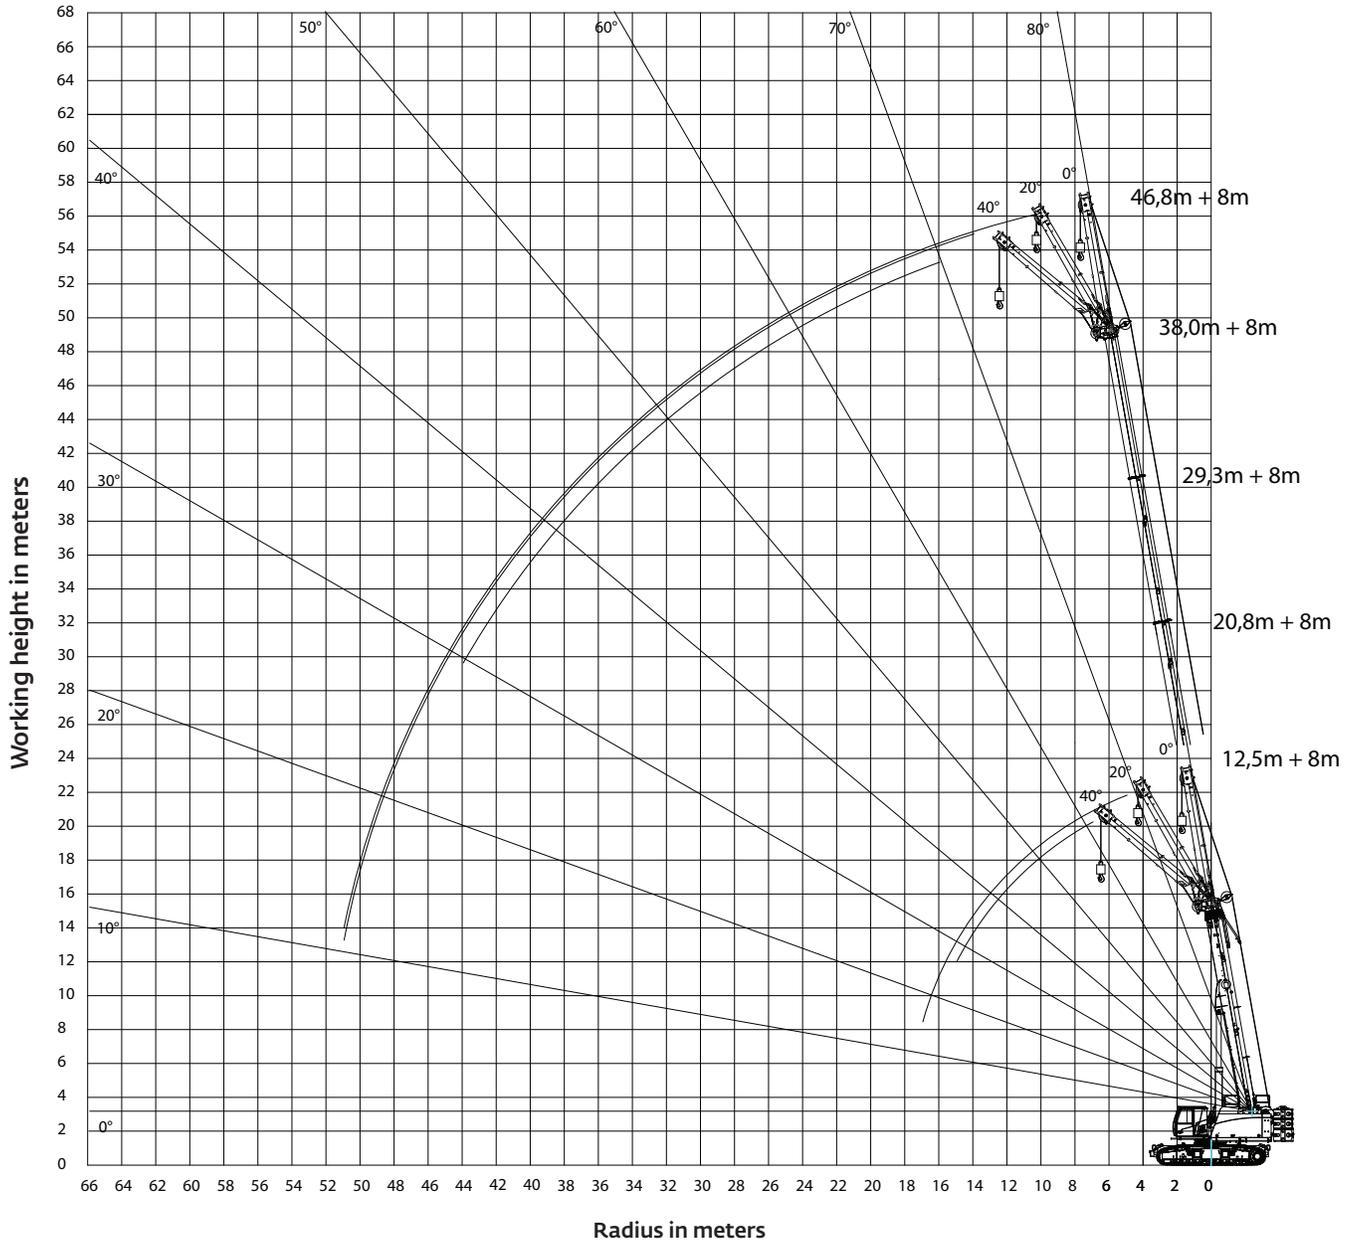

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Extensions - metric 75%



46,8 m



8 m



28,2 t



100%



360°



0.6°



Kilograms


Radius [m]	Main boom length [m]														
	12.5			20.8			29.3			38.0			46.8		
	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°
4.0	15.0			15.0											
5.0	14.0	10.2		14.5											
6.0	12.9	9.6		13.7	9.8		12.8								
7.0	11.9	9.0	7.2	12.9	9.4		12.3								
8.0	10.9	8.5	6.9	12.2	9.0	6.9	11.8			10.4					
9.0	10.2	8.0	6.7	11.5	8.6	6.7	11.3	8.6		10.2					
10.0	9.5	7.6	6.5	10.9	8.3	6.5	10.9	8.3		10.0			7.0		
12.0	8.2	6.9	6.1	9.9	7.7	6.2	10.1	7.9	6.4	9.5	7.7		7.0		
14.0	7.2	6.4	5.8	9.0	7.2	6.0	9.4	7.4	6.1	9.1	7.3	6.0	7.0	6.9	
16.0	6.4	6.1		8.2	6.7	5.8	8.8	7.0	5.9	8.6	7.0	5.8	7.0	6.7	5.6
18.0				7.5	6.4	5.6	8.0	6.7	5.7	8.1	6.7	5.7	7.0	6.5	5.5
20.0				6.9	6.1	5.4	7.3	6.4	5.5	7.4	6.5	5.5	7.0	6.3	5.4
22.0				6.4	5.9	5.2	6.7	6.1	5.4	6.7	6.2	5.4	6.7	6.1	5.2
24.0				6.0	5.7		6.2	5.9	5.2	6.1	6.0	5.2	6.2	5.9	5.1
26.0							5.7	5.6	5.1	5.6	5.6	5.1	5.8	5.7	5.0
28.0							5.3	5.2	5.1	5.2	5.2	5.0	5.5	5.4	4.9
30.0							4.9	4.8		4.8	4.8	4.8	5.1	5.1	4.8
32.0							4.2	4.5		4.4	4.4	4.5	4.8	4.7	4.7
34.0										4.0	4.1	4.1	4.5	4.5	4.5
36.0										3.4	3.8	3.7	3.8	4.2	4.2
38.0										2.8	3.0		3.3	3.5	3.9
40.0										2.4	2.5		2.9	3.0	3.2
42.0										2.0	2.1		2.5	2.6	2.7
44.0													2.1	2.2	2.3
46.0													1.8	1.9	
48.0													1.4	1.5	
50.0													1.2	1.2	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# Working range

Extensions - metric 75%

## Main boom with extensions

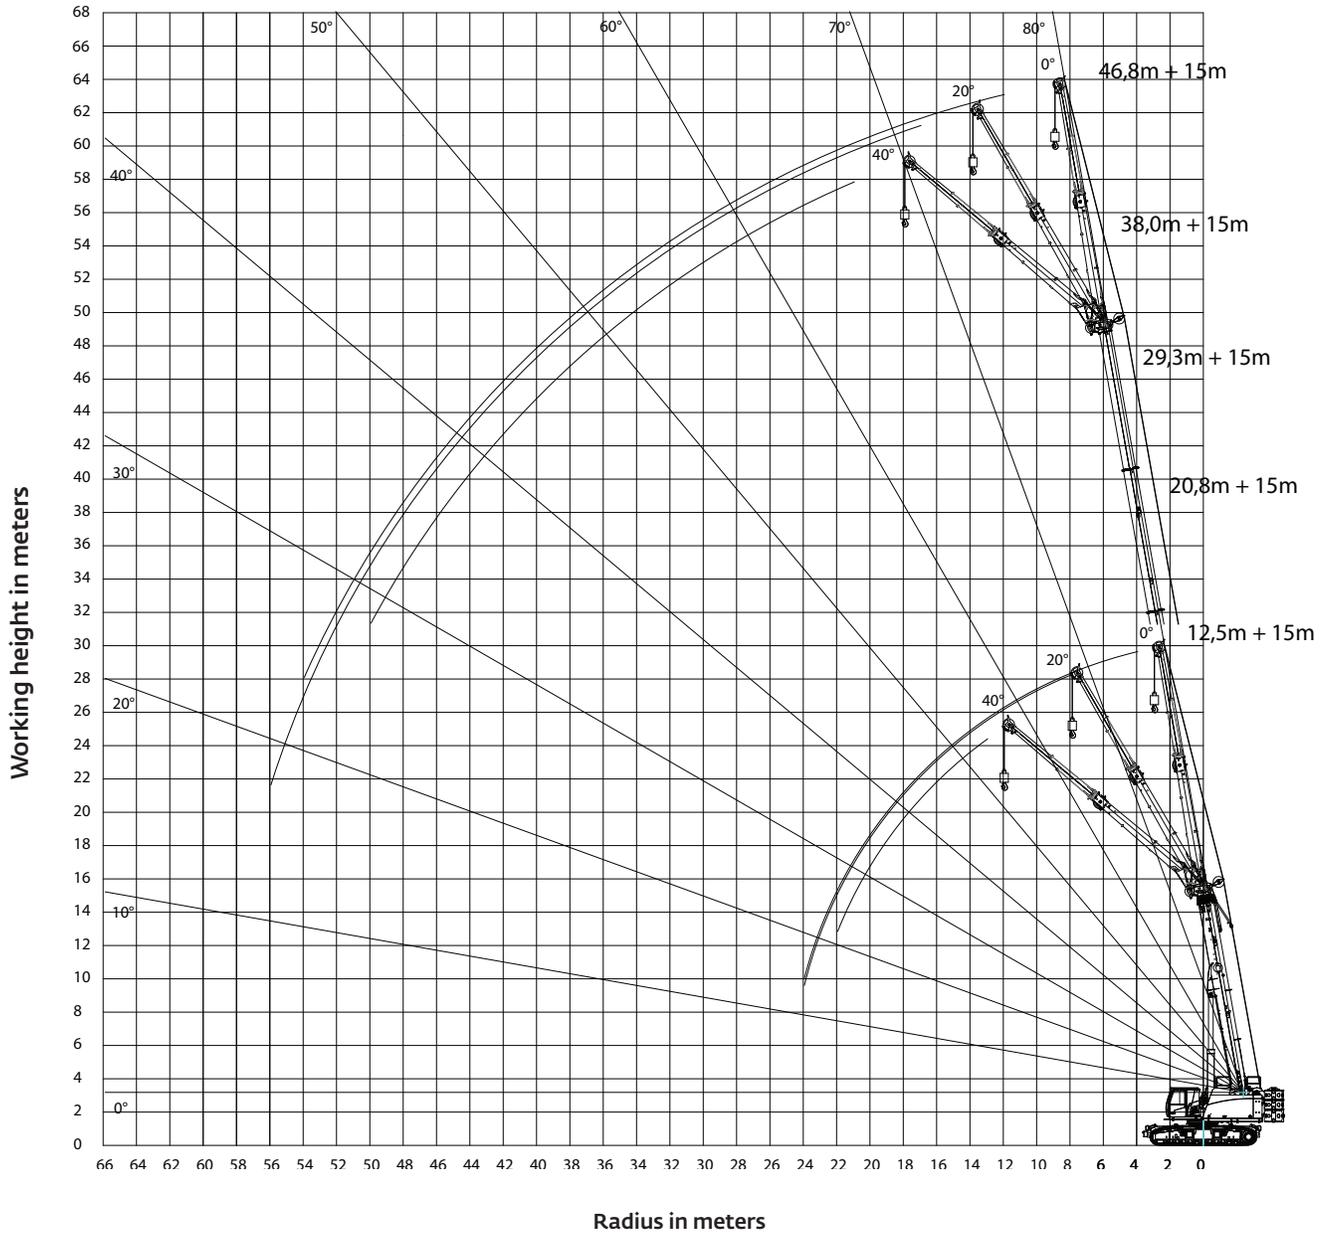

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Extensions - metric 75%



46,8 m



15 m



28,2 t



100%



360°



0.6°



Kilograms


Radius [m]	Main boom length [m]														
	12.5			20.8			29.3			38.0			46.8		
	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°
4.0	5.9														
5.0	5.7			5.3											
6.0	5.4			5.2											
7.0	5.1			5.1			4.7								
8.0	4.8	3.8		5.0			4.6								
9.0	4.5	3.7		4.8			4.5			4.0					
10.0	4.2	3.5		4.6	3.5		4.5			4.0					
12.0	3.7	3.2		4.2	3.3		4.3			4.0			3.1		
14.0	3.4	3.0	2.5	3.8	3.0	2.5	4.1	3.2		3.9			3.1		
16.0	3.1	2.8	2.4	3.5	2.9	2.4	3.8	3.0	2.5	3.8	3.0		3.1		
18.0	2.8	2.6	2.3	3.2	2.7	2.4	3.6	2.9	2.4	3.6	2.9	2.3	3.1	2.8	
20.0	2.6	2.5	2.2	3.0	2.6	2.3	3.3	2.8	2.3	3.5	2.7	2.3	3.1	2.7	
22.0	2.4	2.4	2.2	2.8	2.5	2.2	3.1	2.6	2.2	3.3	2.6	2.3	3.1	2.6	2.2
24.0	2.2	2.2		2.6	2.4	2.2	3.0	2.5	2.2	3.1	2.5	2.2	3.0	2.5	2.2
26.0				2.5	2.3	2.1	2.8	2.4	2.1	3.0	2.5	2.2	2.9	2.4	2.1
28.0				2.3	2.2	2.1	2.7	2.3	2.1	2.8	2.4	2.1	2.9	2.4	2.1
30.0				2.2	2.2		2.5	2.3	2.1	2.7	2.3	2.1	2.8	2.3	2.1
32.0					2.1		2.4	2.2	2.1	2.6	2.2	2.0	2.7	2.2	2.0
34.0							2.3	2.1	2.1	2.5	2.2	2.0	2.6	2.2	2.0
36.0							2.2	2.1	2.1	2.4	2.1	2.0	2.5	2.1	2.0
38.0							2.1	2.1		2.3	2.1	2.0	2.4	2.1	1.9
40.0							2.1	2.1		2.2	2.0	2.0	2.3	2.0	1.9
42.0										2.1	2.0	2.0	2.2	2.0	1.9
44.0										2.1	2.0		2.1	2.0	1.9
46.0										2.0	2.0		2.1	1.9	1.9
48.0										1.5	1.7		2.0	1.9	1.9
50.0													1.5	1.9	1.9
52.0													1.3	1.5	
54.0													1.0	1.2	
56.0														0.9	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# Working range

Main boom - imperial 75%

## Main boom

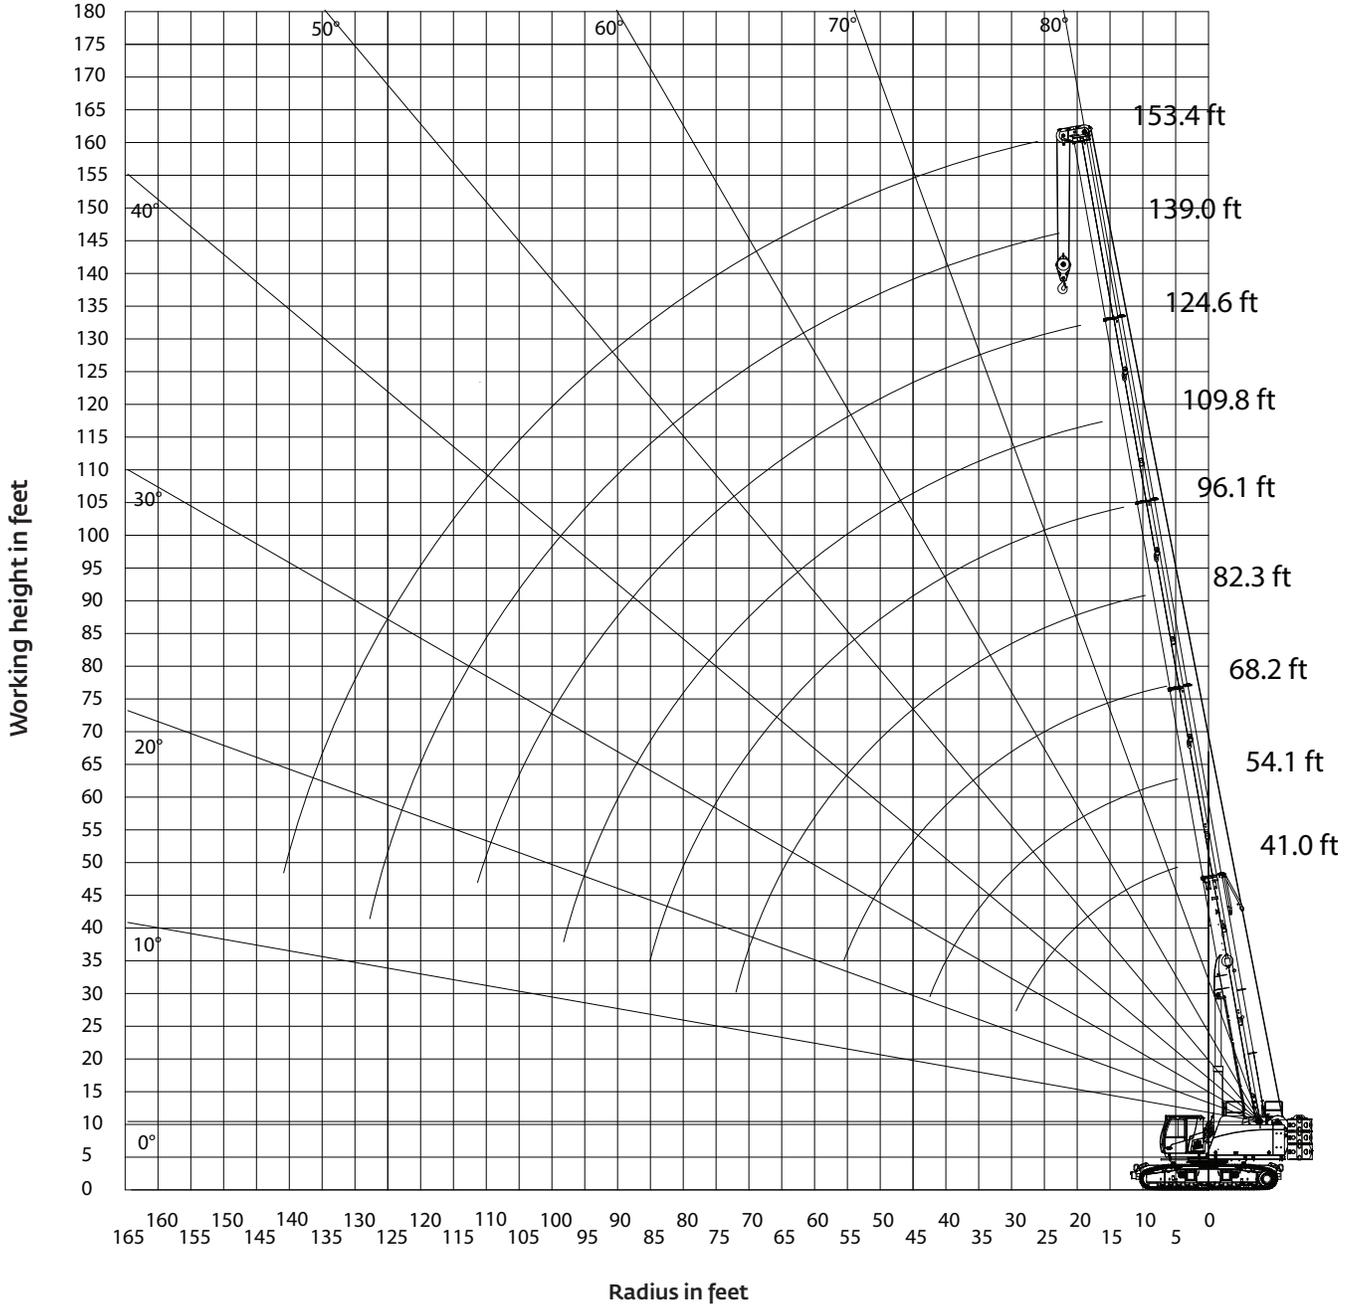

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Main boom - imperial 75%



153.4 ft



62,181 lb



100%



360°



0.6°



Pounds

Radius [ft]	Main boom length [ft]								
	41.0	54.1	68.2	82.3	96.1	109.9	124.7	139.1	153.5
10	212.6	143.3	132.1	118.6					
15	174.8	140.8	123.6	105.8	86.1				
20	140.4	128.6	109.8	95.3	78.3	63.0	50.4		
25	99.9	102.6	97.5	85.9	71.6	57.5	45.5	34.2	
30	66.1	77.6	78.0	75.1	65.7	53.7	41.4	33.4	26.5
35		63.2	63.6	61.4	57.3	49.5	37.8	31.6	26.5
40		52.0	52.5	51.5	48.7	44.9	34.9	29.1	25.9
45		42.8	44.7	44.0	41.7	38.6	32.2	26.9	24.9
50			38.0	38.0	36.2	33.2	29.4	24.9	23.8
55			33.1	32.9	32.0	29.0	26.2	23.1	22.5
60			20.0	28.9	28.5	25.7	23.1	21.5	21.1
65				26.2	25.4	22.8	20.8	20.0	19.9
70				24.5	22.7	21.3	19.0	18.4	18.7
75					20.7	20.0	17.7	16.9	17.7
80					19.3	18.8	16.5	15.1	16.7
85					17.5	17.7	15.4	13.7	15.8
90						16.2	14.5	12.8	14.8
95						14.8	13.6	11.7	13.5
100							12.8	11.0	12.2
105							12.0	10.1	11.0
110							11.3	9.7	10.0
115								9.0	9.0
120								8.6	8.0
125								8.1	7.2
130									6.6
135									5.7
140									5.1

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Main boom - imperial 75%



153.4 ft



62,181 lb



100%



360°



1.5°



Pounds

Radius [ft]	Main boom length [ft]								
	41.0	54.1	68.2	82.3	96.1	109.9	124.7	139.1	153.5
10	164.3	106.3	97.3	85.7					
15	135.7	103.2	89.6	78.2	62.1				
20	120.3	100.8	81.1	72.0	57.9	47.9	38.1		
25	98.3	91.2	74.0	66.4	53.7	45.1	36.2	25.8	
30		76.3	67.7	61.5	49.9	42.6	34.4	25.7	19.0
35		61.5	60.1	55.1	46.7	38.7	32.8	24.9	18.9
40		50.5	50.3	48.5	43.9	35.9	31.3	24.0	18.9
45		40.6	43.4	42.1	39.3	33.2	29.2	23.2	18.8
50			37.3	35.4	34.1	28.9	25.6	22.4	18.3
55			32.6	31.6	30.1	25.3	22.5	21.4	17.6
60				28.4	26.8	22.7	20.7	19.5	17.0
65				25.3	24.2	20.7	18.7	17.8	16.5
70				23.5	22.0	19.0	17.0	16.0	15.8
75					20.1	17.7	15.7	14.5	15.2
80					18.7	16.6	14.5	13.2	14.5
85					16.9	15.8	13.6	12.2	13.9
90						15.1	12.8	11.2	13.3
95						14.5	12.2	10.4	12.8
100							11.7	9.8	11.9
105							11.0	9.2	10.8
110							10.4	8.8	9.6
115								8.4	8.8
120								8.2	7.8
125								7.7	7.0
130									6.2
135									5.4
140									4.8

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.*

*The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Auxiliary boom nose - imperial 75%



153.4 ft



with auxiliary boom nose



62,181 lb



100%



360°



1.5°



Pounds


Radius [ft]	Main boom length [m]								
	41.0	54.1	68.2	82.3	96.1	109.9	124.7	139.1	153.5
10	19.8	19.8	19.8	19.8					
15	19.8	19.8	19.8	19.8	19.8				
20	19.8	19.8	19.8	19.8	19.8	19.8	19.8		
25	19.8	19.8	19.8	19.8	19.8	19.8	19.8	19.8	
30		19.8	19.8	19.8	19.8	19.8	19.8	19.8	19.0
35		19.8	19.8	19.8	19.8	19.8	19.8	19.8	18.9
40		19.8	19.8	19.8	19.8	19.8	19.8	19.8	18.9
45		19.8	19.8	19.8	19.8	19.8	19.8	19.8	18.8
50			19.8	19.8	19.8	19.8	19.8	19.8	18.3
55			19.8	19.8	19.8	19.8	19.8	19.8	17.6
60				19.8	19.8	19.8	19.8	19.5	17.0
65				19.8	19.8	19.8	18.7	17.8	16.5
70				19.8	19.8	19.0	17.0	16.0	15.8
75					19.8	17.7	15.7	14.5	15.2
80					18.7	16.6	14.5	13.2	14.5
85					16.9	15.8	13.6	12.2	13.9
90						15.1	12.8	11.2	13.3
95						14.5	12.2	10.4	12.8
100							11.7	9.8	11.9
105							11.0	9.2	10.8
110							10.4	8.8	9.6
115								8.4	8.8
120								8.2	7.8
125								7.7	7.0
130									6.2
135									5.4
140									4.8

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Working range

Extensions - imperial 75%

## Main boom with extensions

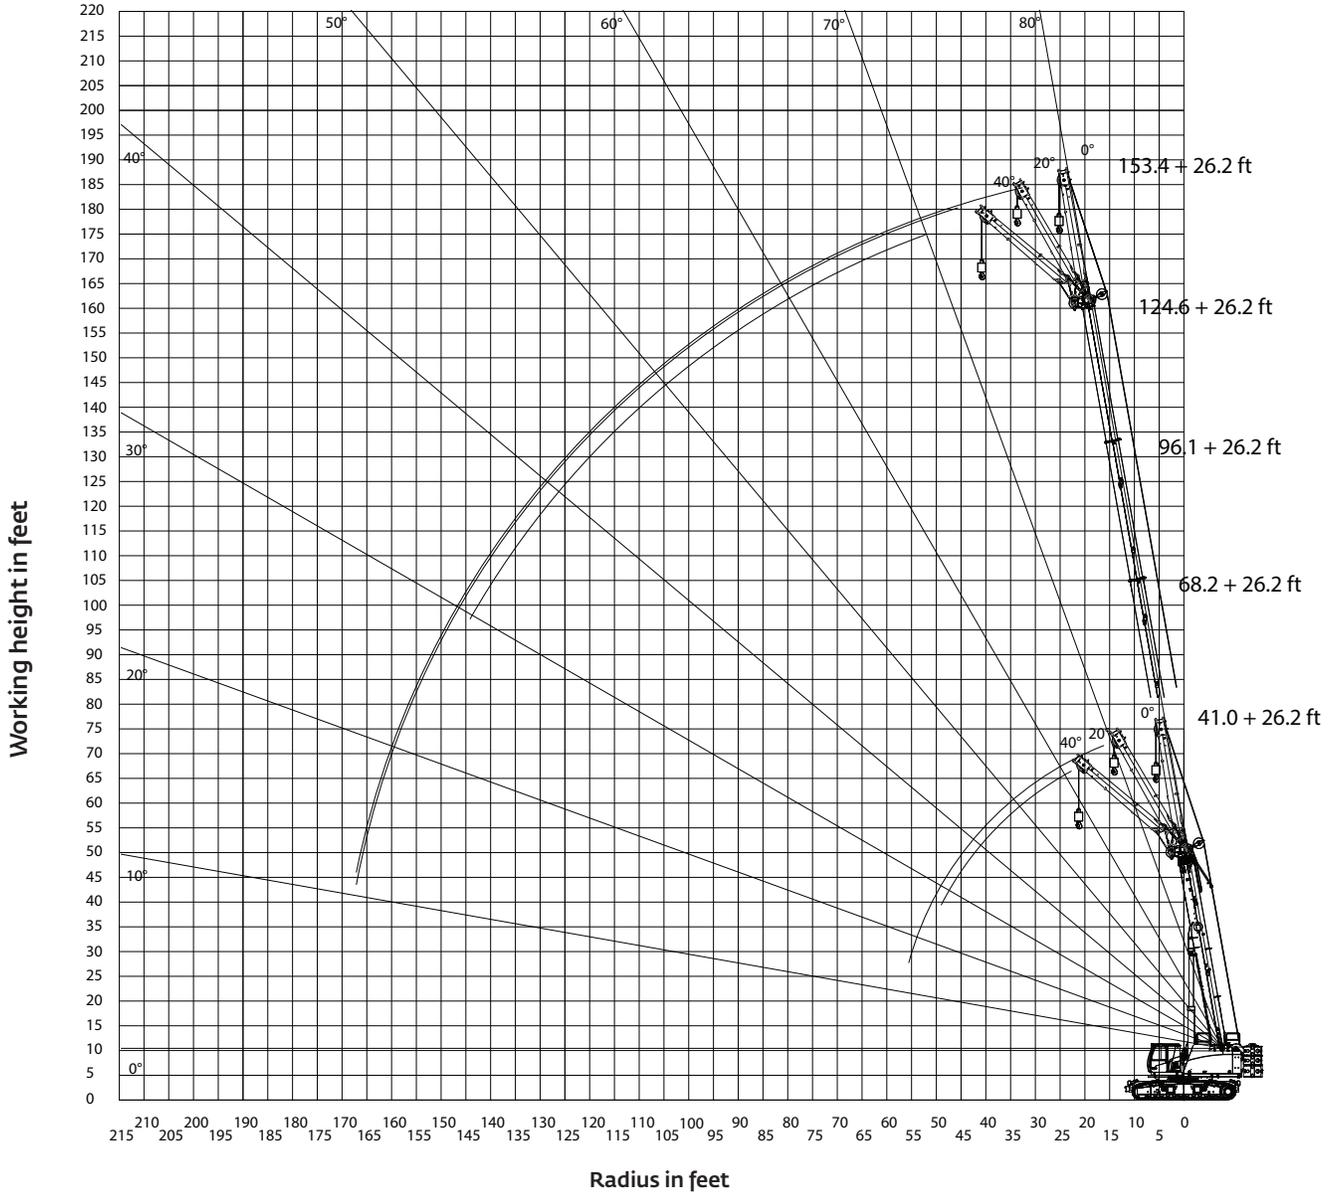

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

# Load chart

Extensions - imperial 75%



153.4 ft



26.2 ft



62,181 lb



100%



360°



0.6°



Pounds


Radius [ft]	Main boom length [ft]														
	41.0			67.9			96.1			124.6			153.4		
	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°
15	31.8			32.4											
20	28.3	21.0		30.0	21.5		28.0								
25	24.9	19.1	15.5	27.5	20.2		26.4								
30	22.3	17.5	14.7	25.2	19.0	14.7	24.9	18.9		22.3					
35	20.0	16.3	14.1	23.3	17.8	14.1	23.4	18.0		21.7			15.4		
40	17.9	15.2	13.4	21.6	16.8	13.6	22.1	17.3	14.0	21.0	16.9		15.4		
45	16.2	14.3	12.9	20.2	16.0	13.3	20.9	16.5	13.6	20.1	16.3	11.3	15.4	13.1	
50	14.8	13.7		18.8	15.2	13.0	19.8	15.8	13.2	19.3	15.8	13.0	15.4	15.0	
55				17.5	14.5	12.6	18.7	15.2	12.8	18.5	15.3	12.7	15.4	14.6	12.3
60				16.4	14.0	12.3	17.5	14.7	12.5	17.6	14.8	12.4	15.4	14.2	12.1
65				15.4	13.5	11.9	16.3	14.2	12.2	16.4	14.3	12.2	15.4	13.9	11.9
70				14.6	13.1	11.6	15.2	13.7	11.9	15.3	13.9	11.9	15.0	13.5	11.6
75				13.8	12.8		14.3	13.3	11.7	14.3	13.5	11.7	14.3	13.2	11.4
80				10.8	10.2		13.4	12.9	11.5	13.3	13.0	11.4	13.5	12.9	11.2
85							12.6	12.4	11.3	12.4	12.5	11.2	12.9	12.5	11.0
90							11.9	11.7	11.2	11.7	11.7	11.0	12.3	12.0	10.8
95							11.2	11.1		11.0	11.0	10.8	11.7	11.5	10.7
100							10.4	10.5		10.3	10.4	10.4	11.1	11.0	10.5
105							9.3	10.0		9.7	9.7	9.8	10.5	10.5	10.3
110										9.1	9.2	9.2	10.0	10.0	10.0
115										8.1	8.6	8.6	9.1	9.5	9.5
120										7.1	7.8	5.8	8.1	8.8	9.1
125										6.2	6.6		7.3	7.7	8.5
130										5.5	5.8		6.5	6.9	7.3
135										4.8	5.0		5.8	6.2	6.4
140													5.1	5.5	5.6
145													4.5	4.8	4.5
150													4.0	4.2	
155													3.4	3.7	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# Working range

Extensions - imperial 75%

## Main boom with extensions

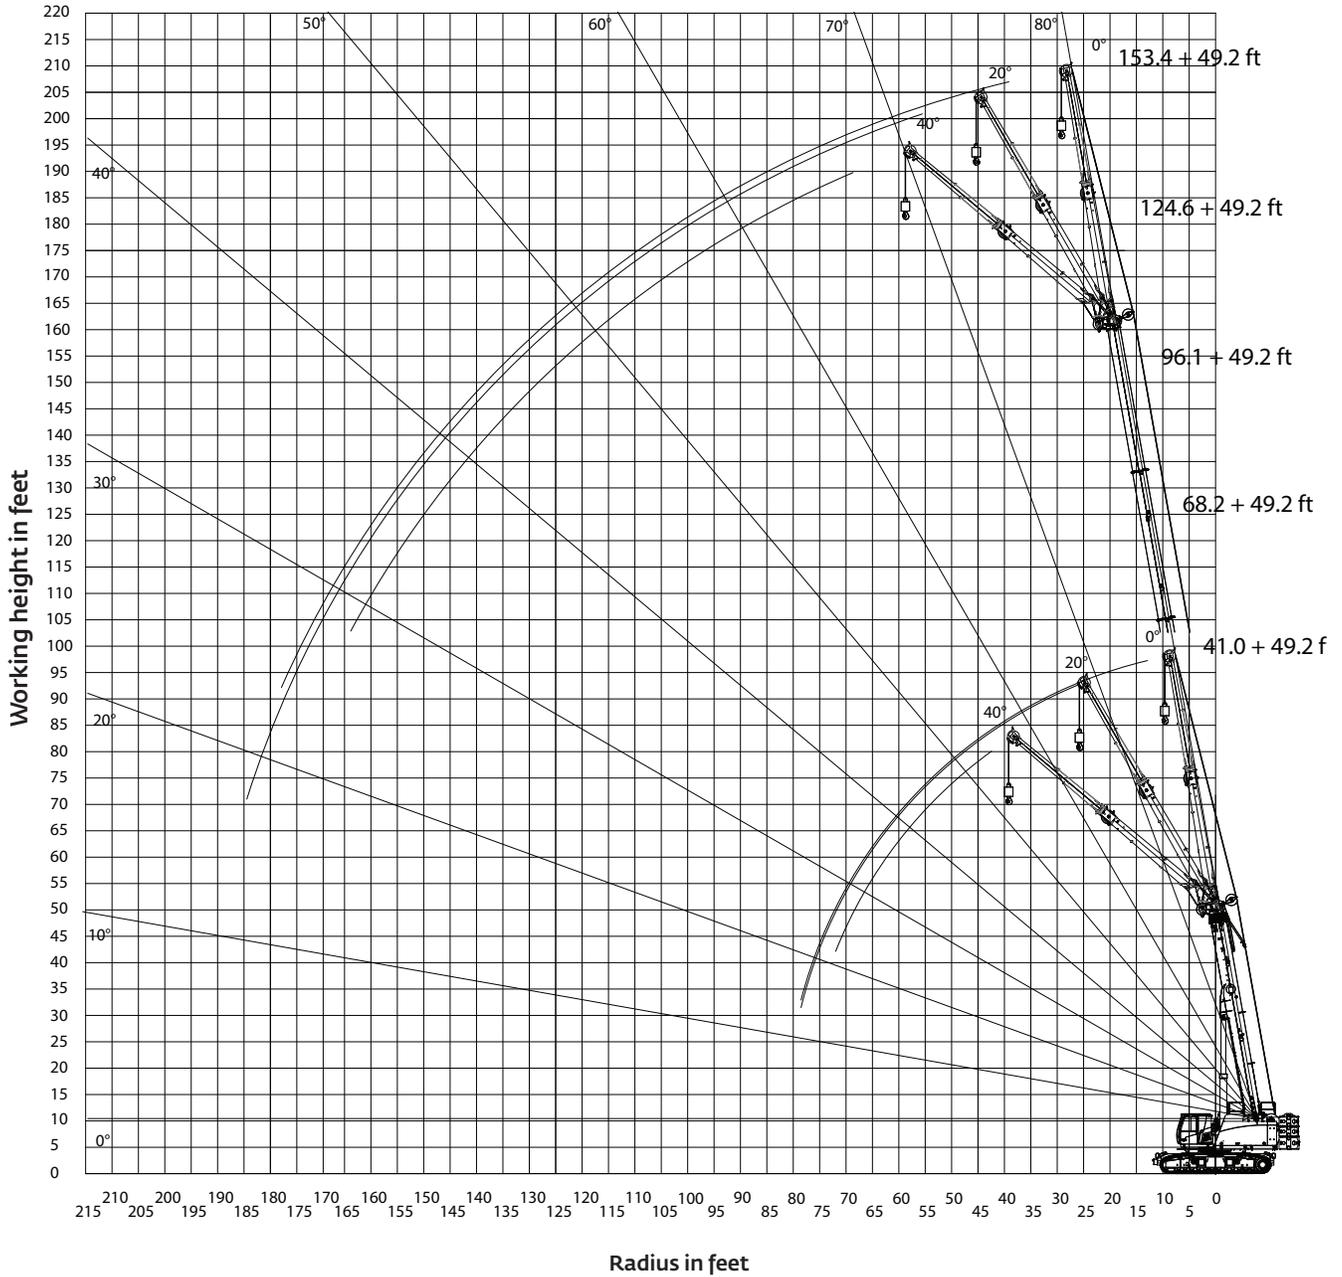

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

# Load chart

Extensions - imperial 75%



153.4 ft



49.2 ft



62,181 lb



100%



360°



0.6°



Pounds

Radius [ft]	Main boom length [ft]														
	41.0			67.9			96.1			124.6			153.4		
	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°	0°	20°	40°
15	12.8														
20	11.9			11.5											
25	10.8			11.0			10.2								
30	9.8	8.1		10.6			10.0			8.8					
35	8.9	7.5		9.9	7.5		9.7			8.8			2.3		
40	8.2	7.0		9.2	7.1		9.4			8.7			6.8		
45	7.5	6.7		8.6	6.8		9.1			8.6			6.8		
50	7.0	6.3	5.4	8.0	6.5	5.4	8.7	6.8		8.4			6.8		
55	6.5	6.0	5.2	7.5	6.2	5.3	8.2	6.6	5.3	8.2	6.5		6.8		
60	6.1	5.7	5.0	7.1	5.9	5.3	7.8	6.3	5.2	7.9	6.3	5.1	6.8	6.2	
65	5.7	5.5	4.9	6.7	5.7	5.1	7.4	6.1	5.1	7.7	6.1	5.1	6.8	6.0	
70	5.4	5.4	4.9	6.3	5.5	4.9	7.1	5.9	5.0	7.4	5.9	5.0	6.8	5.9	
75	5.1	5.1	2.8	6.0	5.3	4.9	6.7	5.7	4.9	7.1	5.7	4.9	6.8	5.7	4.8
80	3.9	3.9		5.7	5.2	4.8	6.5	5.5	4.8	6.8	5.6	4.8	6.7	5.6	4.8
85				5.5	5.0	4.6	6.2	5.4	4.7	6.6	5.4	4.8	6.5	5.4	4.7
90				5.2	4.9	4.6	5.9	5.2	4.7	6.3	5.3	4.7	6.4	5.3	4.6
95				5.0	4.8		5.7	5.1	4.6	6.1	5.1	4.6	6.2	5.2	4.6
100				3.7	4.7		5.5	5.0	4.6	5.9	5.0	4.6	6.0	5.1	4.5
105					4.6		5.3	4.9	4.6	5.7	4.9	4.5	5.9	4.9	4.5
110							5.1	4.8	4.6	5.5	4.8	4.4	5.7	4.8	4.4
115							5.0	4.7	4.6	5.4	4.7	4.4	5.5	4.8	4.4
120							4.8	4.6	3.3	5.2	4.6	4.4	5.4	4.7	4.3
125							4.7	4.6		5.1	4.6	4.4	5.2	4.6	4.3
130							4.6	4.6		4.9	4.5	4.4	5.1	4.5	4.2
135							2.0	2.0		4.8	4.4	4.4	5.0	4.4	4.2
140										4.7	4.4		4.8	4.4	4.2
145										4.6	4.4		4.7	4.3	4.2
150										4.5	4.4		4.6	4.2	4.2
155										3.8	4.0		4.5	4.2	4.2
160													4.1	4.2	4.2
165													3.3	4.0	3.6
170													2.9	3.3	
175													2.5	2.8	
180														2.4	
185														1.6	

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.  
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.