

15. Repair

If you discover defects, damage or leaks they should be repaired as soon as possible. Always take your repairs to an authorized IMT service point. Repairs to the hydraulic system must only be made by an authorized service point.

When you order spare parts for your loader, please state:

- Loader type
- Loader serial number

This information can be found in this instruction manual or stamped into the metal plate on the back side of the loader mast.