


Working range

 11,28 m
(37 ft)

 100%
7,52 m
(24.7 ft)

 360°

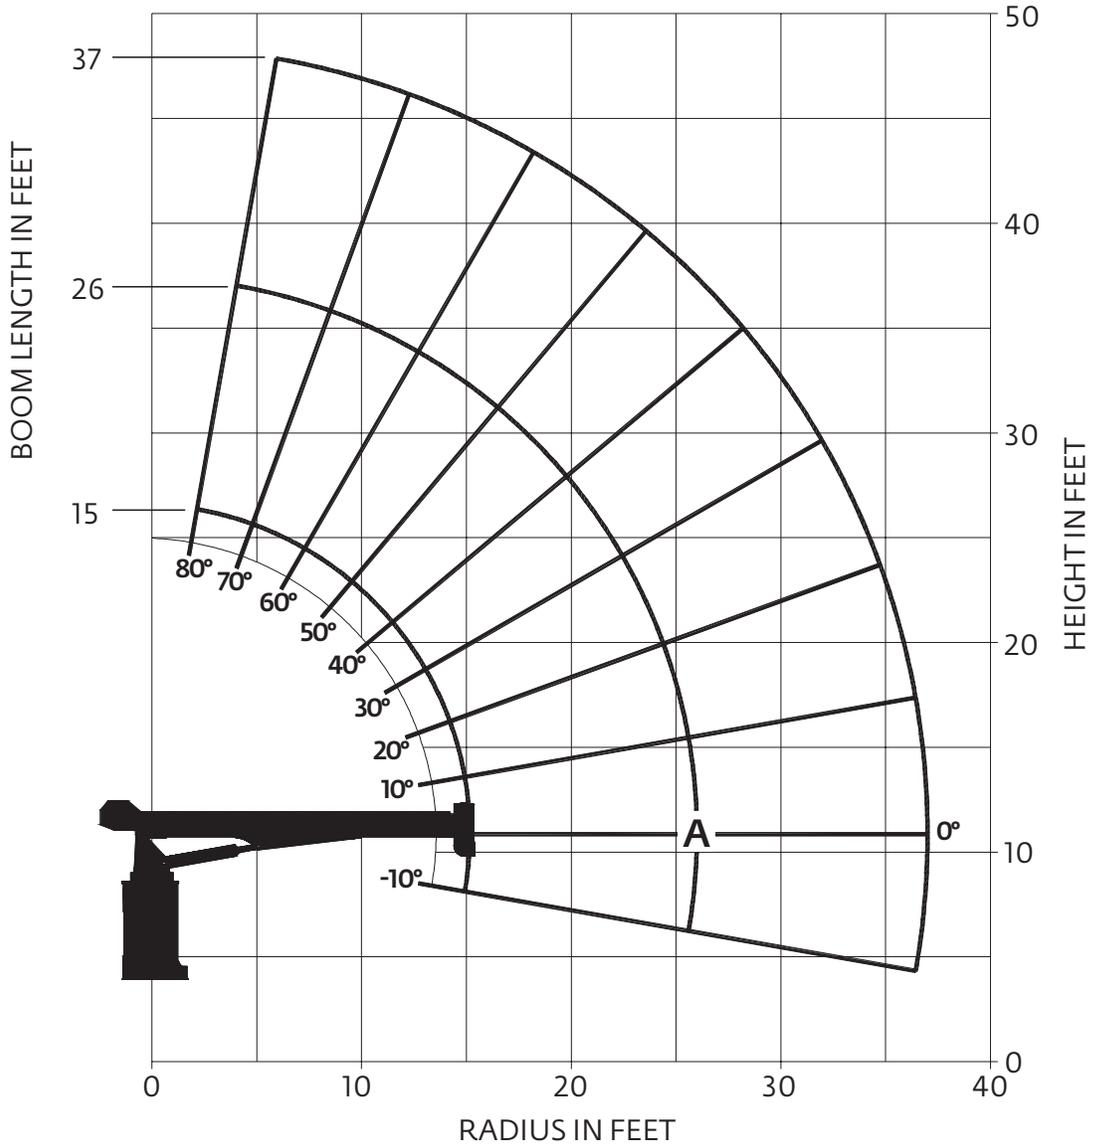

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

Load chart



4,62 m - 11,28 m
(15 ft 2 in - 37 ft)



100%
7,52 m
(24.7 ft)



360°



Pounds

LOAD RADIUS (FEET)	LOADED BOOM ANGLE	15 ft BOOM (lb)	LOADED BOOM ANGLE	A 26 ft BOOM (lb)	LOADED BOOM ANGLE	37 ft BOOM (lb)
5	71	20,000				
6	67	16,100	77	14,050		
8	59	13,450	73	11,600		
10	49	11,500	68	9800	76	8800
12	39	10,000	63	8500	72	7800
14	23	8600	58	7650	69	6900
16			53	6950	66	6150
18			47	6400	62	5450
20			41	5750	59	4800
25			18	4500	49	4250
30					38	3600
35					21	3000
	0	6800	0	3600	0	2300

NOTE:

1. All capacities are in pounds, angles in degrees, radius in feet.
2. Loaded boom angles are given as reference only.


*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

Working range

 14,02 m
(46 ft)

 100%
7,52 m
(24.7 ft)

 360°

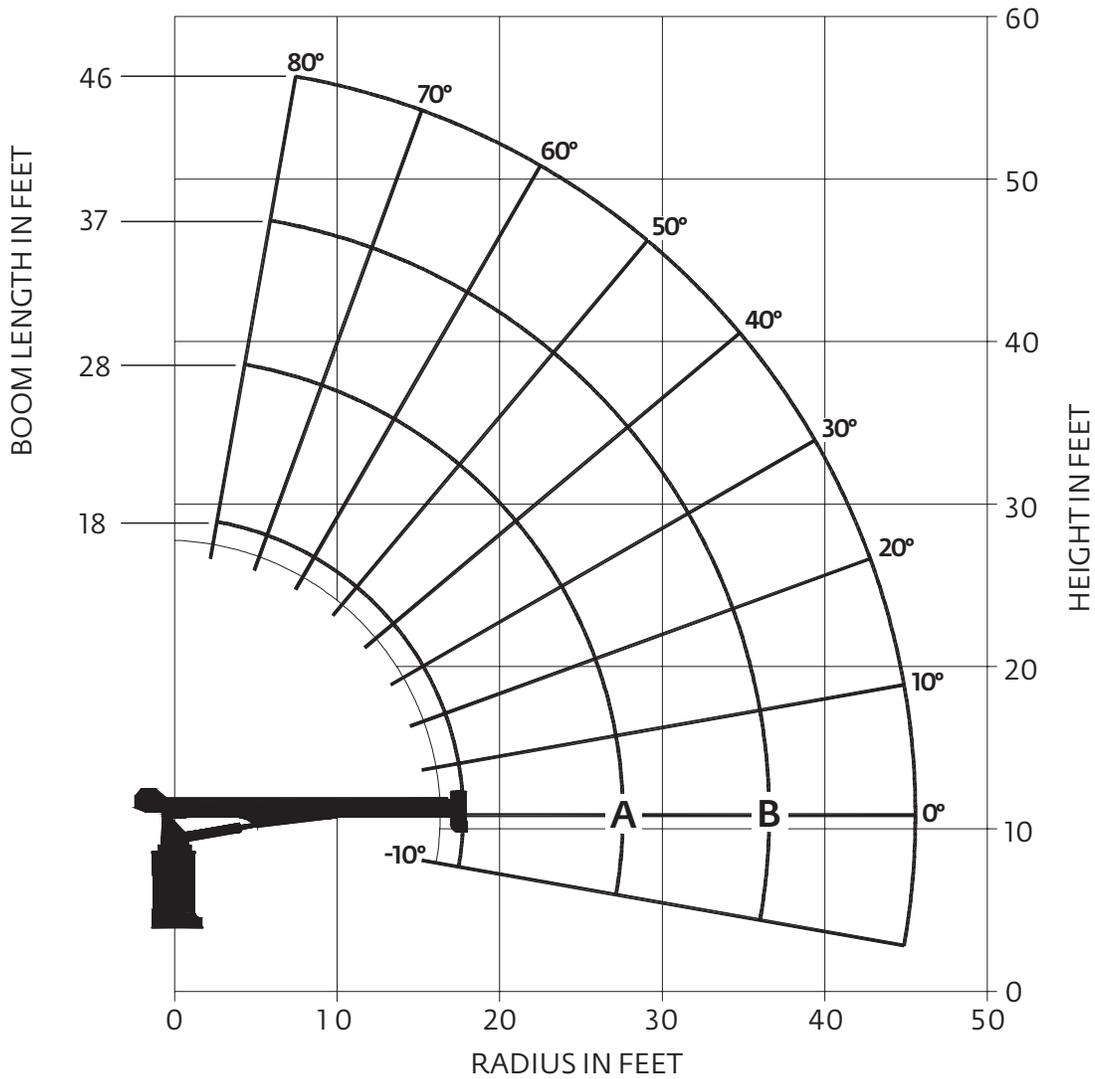

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

Load chart

 5,54 m - 14,02 m
(18 ft 2 in - 46 ft)

 100%
7,52 m
(24.7 ft)

 360°



Pounds

LOAD RADIUS (FEET)	LOADED BOOM ANGLE	18 ft BOOM (lb)	LOADED BOOM ANGLE	A 28 ft BOOM (lb)	LOADED BOOM ANGLE	B 37 ft BOOM (lb)	LOADED BOOM ANGLE	46 ft BOOM (lb)
5	74	20,000						
6	71	15,550	78	14,250				
8	64	12,600	74	11,550	78	10,700		
10	56	10,600	70	9550	75	8850		
12	48	9300	65	8150	72	7600	76	6750
14	41	8250	61	7200	69	6750	73	6300
16	27	7050	56	6550	66	6050	71	5450
18			51	6050	63	5450	69	4950
20			46	5450	59	4800	66	4650
25			29	4600	49	4150	59	3850
30					38	3500	51	3450
35					21	2850	42	2900
40							31	2400
45							14	1950
	0	5300	0	3150	0	2200	0	1550

NOTE:

- 1. All capacities are in pounds, angles in degrees, radius in feet.
- 2. Loaded boom angles are given as reference only.

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*

Load charts




17,07 m
(56 ft)



100%
7,52 m
(24.7 ft)



360°

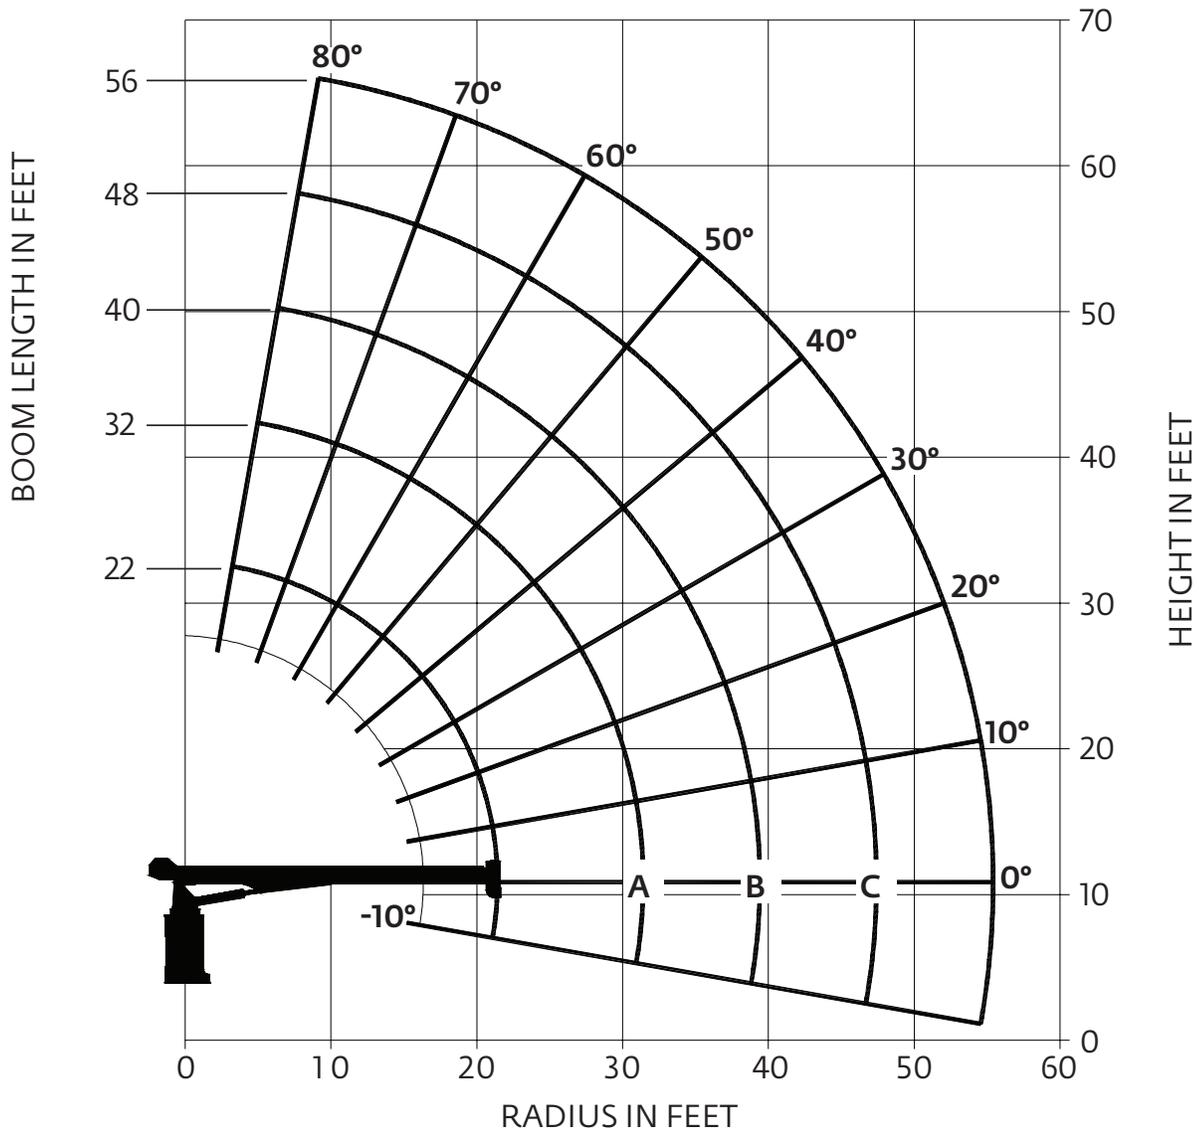

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.

Load charts



6,55 m - 17,07 m
(21 ft 6 in - 56 ft)



100%
7,52 m
(24.7 ft)



360°



Pounds

LOAD RADIUS (FEET)	LOADED BOOM ANGLE	22 ft BOOM (lb)	LOADED BOOM ANGLE	A 32 ft BOOM (lb)	LOADED BOOM ANGLE	B 40 ft BOOM (lb)	LOADED BOOM ANGLE	C 48 ft BOOM (lb)	LOADED BOOM ANGLE	56 ft BOOM (lb)
5	77.5	20,000								
6	74.5	17,500								
8	70	13,000	76.5	11,100	79.5	10,550				
10	63	10,200	73	9000	77	8800				
12	56.5	9000	69	7800	74	7400	76.5	7250		
14	50	8000	65	7000	70.5	6500	75	6250	77	6000
16	42.5	7100	61	6200	68.5	5800	72.5	5500	75.5	5250
18	34	6300	57.5	5600	65	5300	69.5	5000	73.5	4700
20	23	5600	53	5200	62	4900	67.5	4700	71	4300
25			40.5	4200	53.5	4000	61	3800	65.5	3500
30			22.5	3350	43.5	3300	53.5	3100	60	2900
35					31	2750	45.5	2700	53.5	2500
40							36	2200	46.5	2100
45							22.5	1850	39	1750
50									29	1500
55									13	1150
	0	4250	0	2500	0	1800	0	1350	0	950

NOTE:

1. All capacities are in pounds, angles in degrees, radius in feet.
2. Loaded boom angles are given as reference only.

*THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.
The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.*