


Dimensions

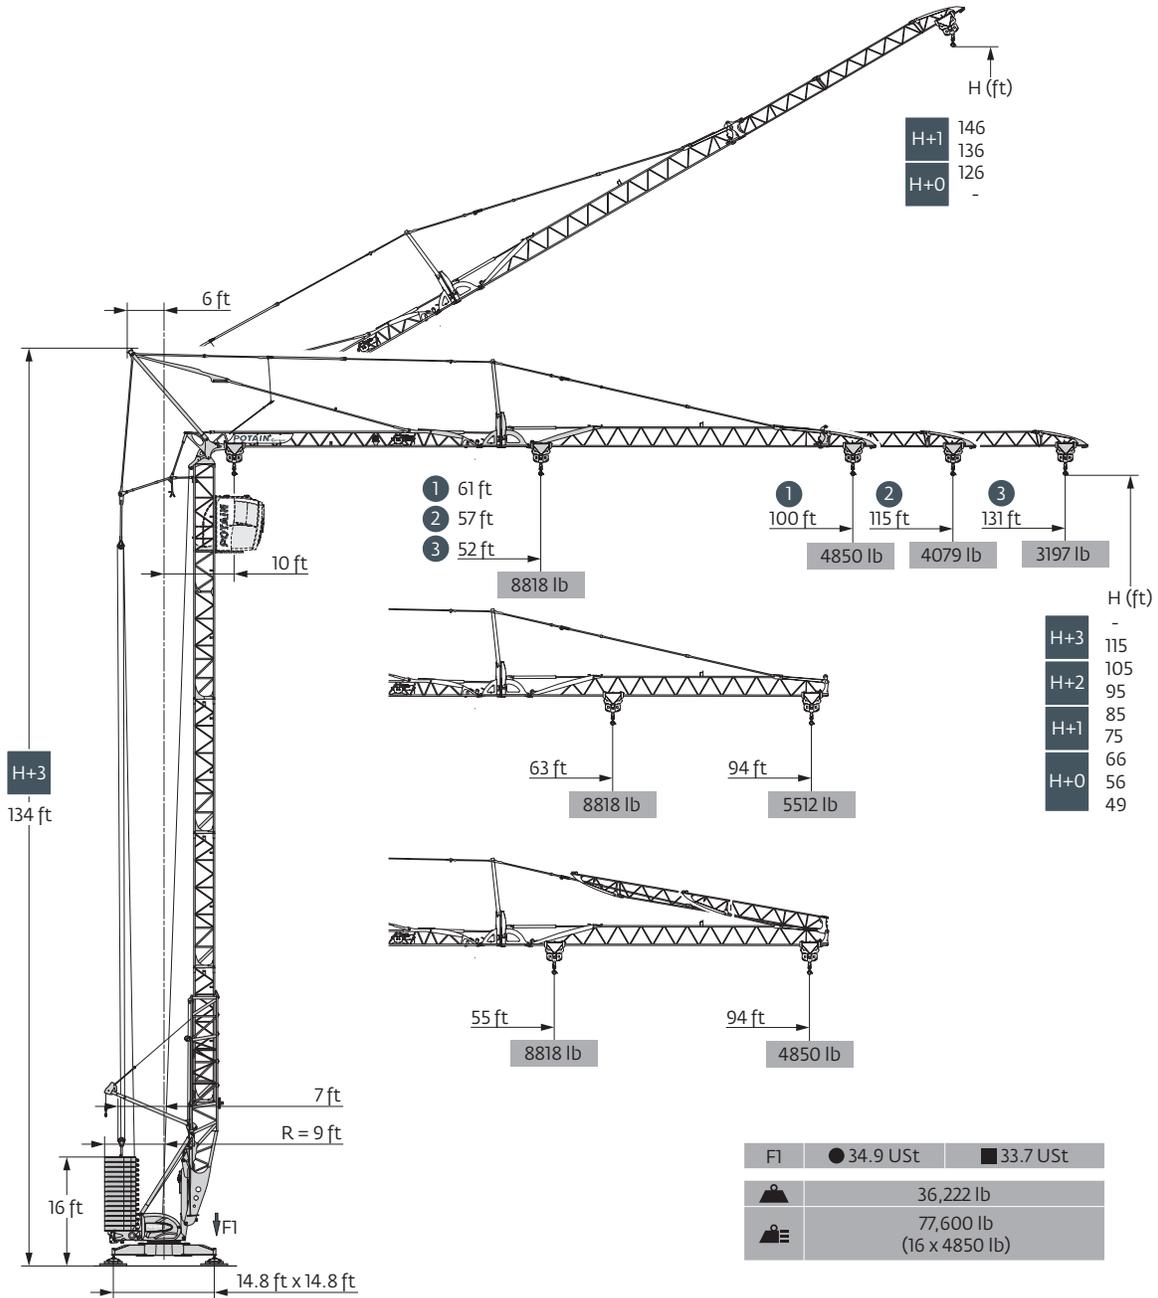

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Potain Igo T70 A The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.