

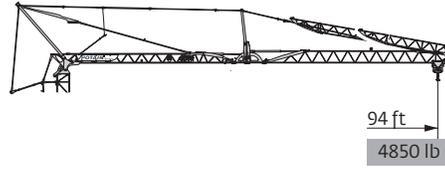


Load charts

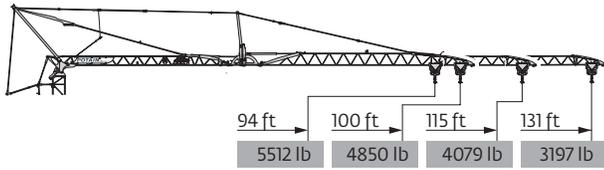


131 ft	10	▶	52	59	66	72	79	85	86	92	98	105	112	118	125	131	ft
▲▲▲			8818	7650	6746	5997	5401	4894	4850	4475	4101	3792	3527	3285	3064	2866	lb
									4850	4475	4101	3792	3527	3285	3064	2866	lb
									4850	4519	4189	3858	3638	3417	3197		lb
115 ft	10	▶	57	59	66	72	79	85	92	93	98	105	112	115		ft	
▲▲▲			8818	8378	7385	6592	5930	5379	4916	4850	4531	4189	3880	3748		lb	
									4850	4531	4189	3880	3748			lb	
									4850	4519	4189	4079				lb	
100 ft	10	▶	61	66	72	79	85	92	98	100						ft	
▲▲▲			8818	8047	7165	6460	5886	5379	4938	4850						lb	
									4850							lb	
									4850							lb	
94 ft	10	▶	63	66	72	79	85	92	94							ft	
▲▲▲			8818	8400	7496	6768	6151	5622	5512							lb	
									4850							lb	
									4850							lb	
131 ft	10	▶	55	59	66	72	79	85	90	92	94					ft	
▲▲▲			8818	8069	7099	6327	5710	5181	4850	4729	4630					lb	
									4850	4729	4630					lb	
									4850							lb	

▲▲▲	131 ft 115 ft 100 ft 94 ft
H+2	105
H+1	95
H+0	85
	75
	66
	56
	49

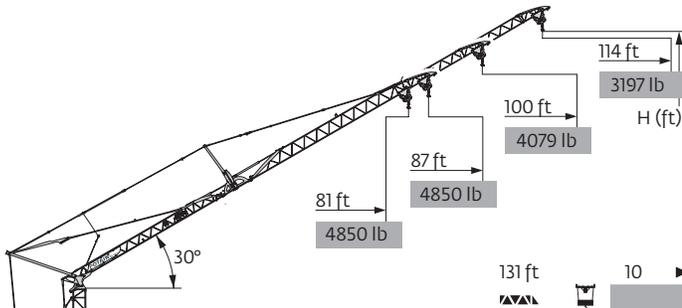

▲▲▲	131 ft	115 ft	100 ft	94 ft
H+1	146	138	-	-
H+0	136	128	120	117

131 ft	10	▶	75	81	92	102	114	ft
▲▲▲			4850	4409	3781	3329	2866	lb
							3197	lb
							3197	lb
115 ft	10	▶	81	87	92	100		ft
▲▲▲			4850	4453	4145	3748		lb
							4079	lb
							4079	lb
100 ft	10	▶	87					ft
▲▲▲			4850					lb
			4850					lb
94 ft	10	▶	81					ft
▲▲▲			4850					lb
			4850					lb

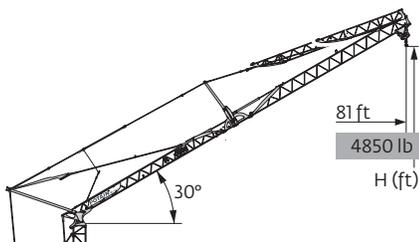

131 ft	10	▶	81	ft
▲▲▲			4850	lb
			4850	lb

▲▲▲	131 ft 115 ft
H+1	-
H+0	117

THIS CHART IS ONLY A GUIDE AND SHOULD NOT BE USED TO OPERATE THE CRANE.

Potain Igo T70 A The individual crane's load chart, operating instructions and other instructional plates must be read and understood prior to operating the crane.